



# CARRY MANUFACTURING, INC. ELECTRICAL PANEL CONTROL BOX

3 H.P.  
SINGLE PHASE  
230 V.



Jumper Wire

If floats are not being used, insert a jumper wire between SW and L2 on the terminal strip.

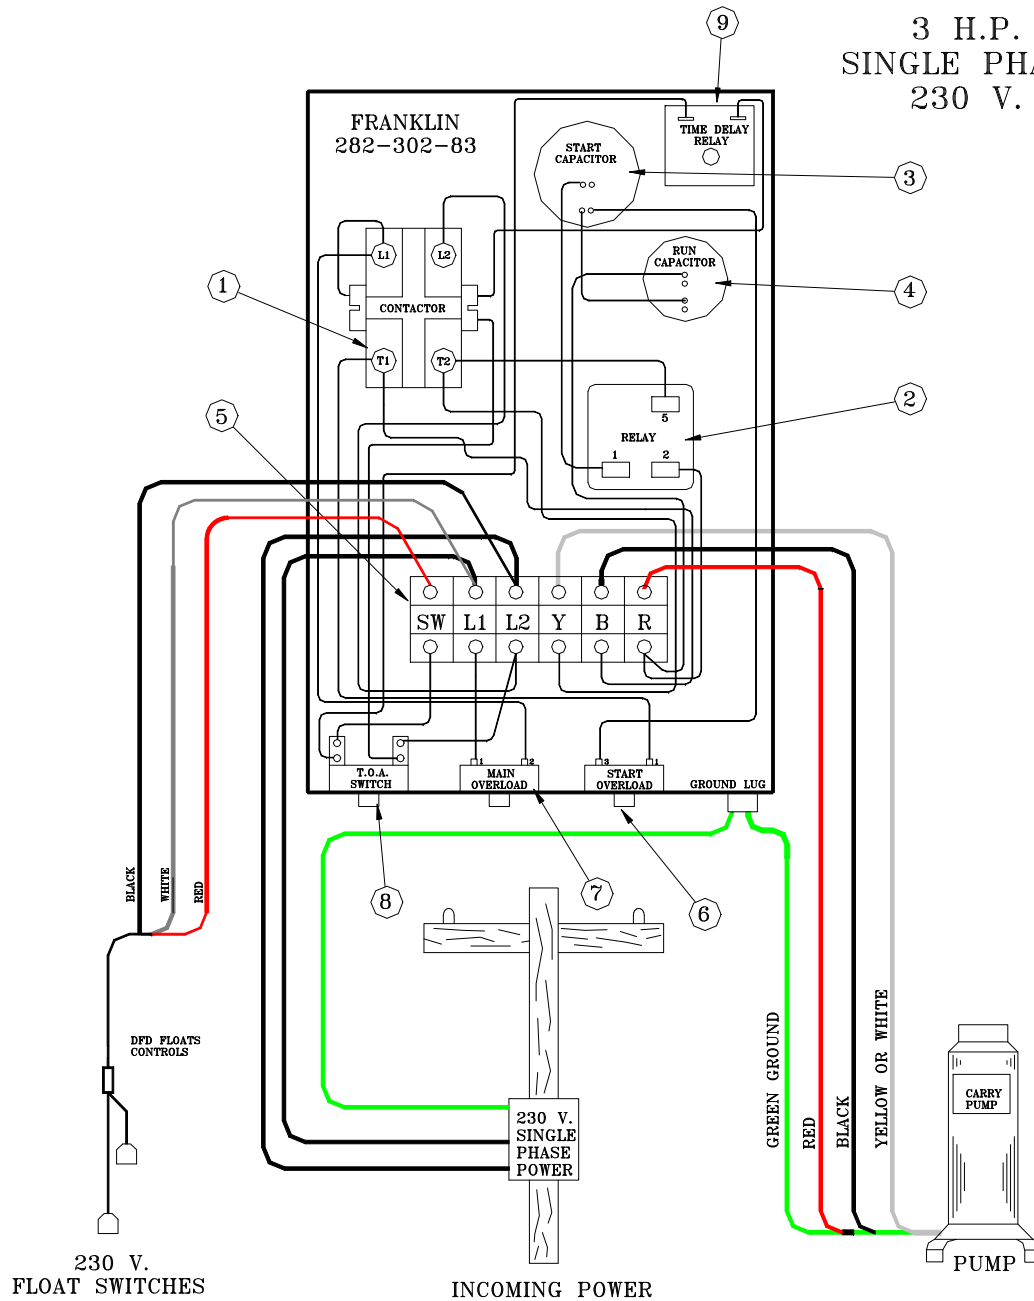

ITEM#	DESCRIPTION	PART#	QTY.
1	CONTACTOR	155 325 102	1
2	RELAY	155 031 102	1
3	START CAPACITOR	275 463 123	1
4	RUN CAPACITOR	155 327 109	1
5	TERMINAL BLOCK		1
6	START OVERLOAD	275 411 118	1
7	MAIN OVERLOAD	275 411 115	1
8*	{ A-O-T SWITCH	SQDZB2BD8	1
	{ A-O-H SWITCH	SQDZB2BD3	1
9	TIME DELAY RELAY	ICM203	1

\* AUTO-OFF-TEST OR AUTO-OFF HAND SWITCH INCLUDED ON DELUX PANELS ONLY

**CARRY MANUFACTURING, INC.  
ELECTRICAL PANEL CONTROL BOX**

**WARNING!!**

Verify that the power supply voltage matches the motor requirements. The wiring must be hooked up according to the drawing and all connections must be tight. Failure to do so, could result in damage to your system.

**Incoming Power Source - Single phase, 230 volts**

The incoming power is connected to L1, L2 and the ground lug on the control box.

**Float Connections** - Wires are connected as follows: 1) Red wire to SW on terminal strip, 2) White wire to L1 on terminal strip, and 3) Black wire to L2 on terminal strip.

**Float Installation** - grey float on top (pump on), black float on bottom (pump off).

**Pump Connections** - Wires are connected as follows: 1) Yellow/White wire to Y on terminal strip, 2) Black wire to B on terminal strip, and 3) Red wire to R on the terminal strip of the control box.

**CAUTION: Failure to ground the control frame can result in a serious electrical shock hazard if a circuit fault occurs.**

07/08/13



**Contact Carry Manufacturing for technical assistance.**